

## ***Precor EFX 546 Versions 2 and 3***

### **How to Access and Run Diagnostic Tests on EFX 546 Versions 2 and 3**

The EFX diagnostic software cycles through the following tests: DISPLAY TEST, KEYBOARD TEST, HEART RATE, LIFT CALIBRATION, and BRAKE TEST.

1. Plug the power cord into the wall outlet, then turn on the EFX with the circuit breaker.
2. Press keys RESET-5-1-7-6-5-7-6-1 sequentially.
3. The message DISPLAY TEST will be displayed. All the LEDs will be illuminated.
4. Press ENTER key to continue to the next test.
5. The message KEYBOARD TEST will be displayed.
6. The display will light two dots for each key on the display. When a key is pressed, the upper of the two lights will go out. Check each key position to ensure that all keys are functioning normally.
7. Press and hold the ENTER key to continue to the next test.
8. The message HEART RATE TEST will be displayed.
9. Three heart rate readings will then be displayed. They will be from left to right, UNFILTERED, FILTERED and POLAR readings. They will be designated U, F, and P, respectively.
10. Press the ENTER key to continue to the next test.